




IRONWOOD GUTTER GUARD INSTALLATION GUIDE

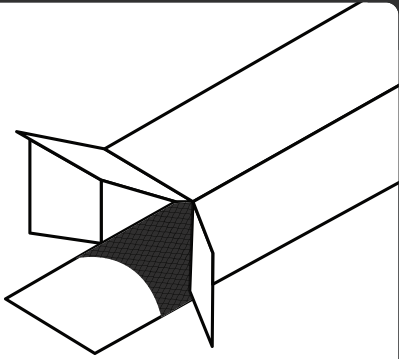

Remove your new Ironwood Gutter Guards from the box.

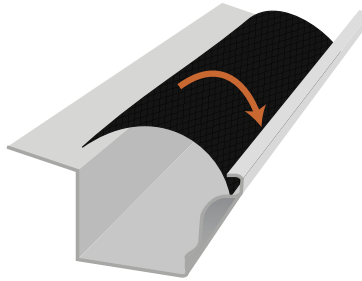

Insert one side of the gutter guard into the lip of the gutter.

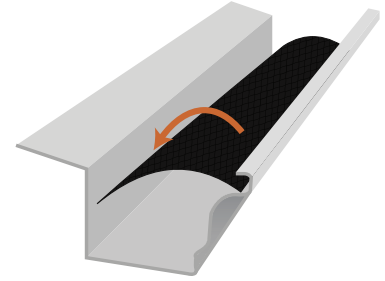

With slight pressure, insert the other side of the gutter guard into the gutter to complete the installation process.

Ironwood Gutter Guards are built for simple, tool-free installation and long-lasting performance. Made from 22-gauge expanded galvanized steel with an aluminum mesh mechanically seamed and rolled for added strength, each guard is finished with a protective powder coating to ensure years of corrosion-free use. Every 50-inch section features a 2-inch overlap for a secure, continuous fit that reduces clogs, minimizes maintenance, and helps protect your home. Warranty information is available upon request and can be found on our website.

1220 MAIN STREET, SUITE 412 VANCOUVER, WA 98660 | (360) 947-1520 | WWW.IRONWOODINDUSTRIALSUPPLY.COM

